

Authorised Dealers

**SHARP** **Panasonic** **SONY**  
**PHILIPS** **HITACHI** *Pioneer* **JVC**

Here are the instructions to reset the option code on the Sony SLV-SE720/820 VCR.

Press the record button on the front panel, then press the menu button on the remote control for 5 seconds until the option setting screen appears on the TV. This has 8 columns and 9 rows of decimal numbers.

01 02 03 04 05 06 07 08      <---- Screen will display this  
09 10 11 12 13 14 15 16  
17 18 19 20 21 22 23 24  
  etc  
  etc  
65 66 67 68 69 70 71 72

Using the FF, REW, STOP and PAUSE buttons on the remote, select each number from the code below and press 'OK' (PLAY). The selected number will highlight.

Press MENU on the remote once all numbers have been entered to save the changes. "Please Wait" appears for a few seconds.

Turn the power OFF and back ON

---

SLV-SE720 code

**02, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 19, 34, 35, 40, 42, 45, 47, 51, 60, 61, 63, 66, 69, 72**

---

SLV-SE820 code

**02, 04, 05, 06, 07, 08, 09, 10, 11, 12, 13, 14, 15, 19, 23, 29, 32, 34, 35, 40, 42, 45, 47, 48, 49, 50, 60, 61, 63, 64, 66, 69, 72**

---