



Due to the complexity and versatility of Sony equipment alternative connections may work equally well. To provide full facilities and avoid mix-ups, it is recommended that only fully wired Scart leads are used.

Lead #	Connection	Comment
1	RF Leads from UHF Aerial to the VCR : VCR to the TV	To record programs, select the appropriate channel on the VCR. To view programs, select the appropriate channel on the TV. To view VCR playbacks, select the VCR channel on the TV. (One of the TV's channels should be tuned to the VCR's RF output channel).
2	Scart Lead (two way) from VCR to TV	Facilitates the viewing of VCR playbacks via the higher quality scart connector, instead of via lead 2 the RF feed. To view, select Scart-2 as the signal source on the TV (usually AV-2). This lead also provides the Smart Link path for Smart Link capable units.
3	Scart Lead from DVD unit to the TV	Presents the AV signals from the DVD to the TV (Scart-1). To view, select Scart-1 as the signal source on the TV (usually AV-1). Set Scart-1 input to RGB mode on the TV.

Video Quality (preference order)

1. RGB mode : 2. S-Video mode : 3. Composite Video mode : 4. RF mode.

VCR = Video Cassette Recorder  
DVD = Digital Versatile Disc