


Authorised Dealers

SHARP **Panasonic** **SONY**
PHILIPS **HITACHI** *Pioneer* **JVC**

Here are the instructions to reset the NVRam code on the Toshiba V752/852 VCR.

Press and hold the 'A.DUB' button on the remote for 10 seconds or more. This will recover the unit from a 'Lock up'

When you see the front display panel change to what looks like a code, press and hold the 'MENU' button for around 5 seconds until the option setting display appears on screen.

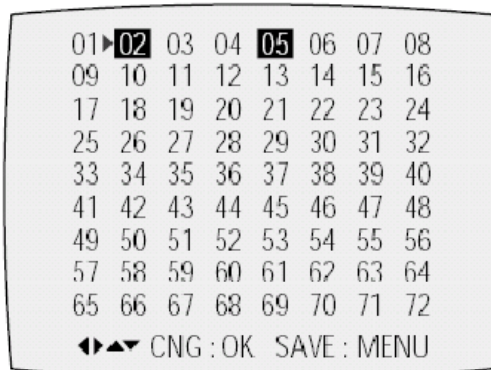

Using the cursor buttons on the remote, select each number from the code below and press 'OK' the selected number will be highlighted.

V752 code

03, 04, 05, 06, 08, 09, 10, 11, 12, 14, 15, 17, 18, 25, 26, 29, 33, 39, 40, 41, 46, 49, 50, 52, 53, 60, 61, 62, 63, 72

V852 code

03, 04, 05, 06, 08, 09, 10, 11, 12, 14, 15, 16, 17, 18, 19, 23, 25, 26, 29, 32, 33, 39, 40, 41, 46, 48, 49, 50, 52, 53, 60, 61, 62, 63, 72

Once all the numbers have been selected, press the 'MENU' button to store the code. 'PLEASE WAIT' will be displayed for a second or two. Turn power off.

After switching back on, all functions should work ok.